


FITTING GUIDE FOR VERTICAL CABLES



STEP 01

First drill an 8mm hole and screw a fixing post screw into the hole, leaving 3mm between the collar shoulders and the post surface.

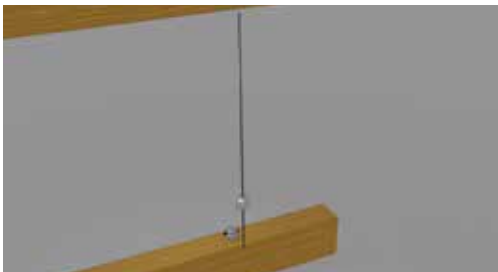

STEP 02

Cut the cable to length and thread a through cap onto the cable. Push the cable into the top of the fixing post screw and tighten the grub screws to secure in place. Repeat this step at the other end of the cable.



STEP 03

Tighten the cable using a 17mm spanner. Screw the fixing post screws in to the posts in opposite directions, keep going until the cable reaches the desired tension.

Finally, push the through caps into place.