



MEASURING GUIDE FOR VERTICAL CABLES

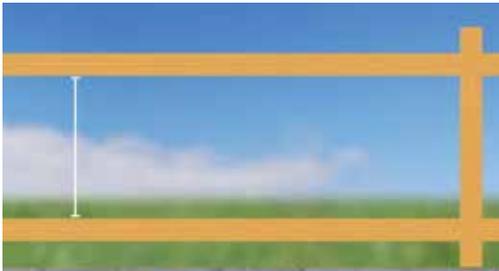

STEP 01

First measure the height of the internal space. Next measure the width of the space and divide that by 100. This will give you the number of uprights needed to fill the space.

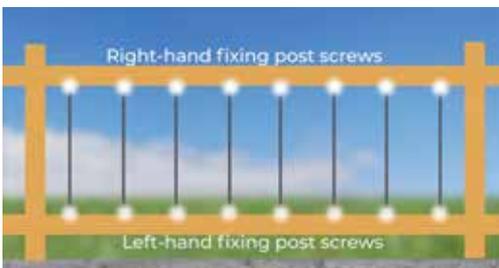

STEP 02

You will need 1x right hand fixing post screw and 1x left hand fixing post screw.

You can order your cable runs online or you can record the details and send them to us via email, or through our enquiry form on our website.